

# Hcard-750 Quick-Start

## Multibank Memory Card For Roland D-50 (rev.2)

### How to install :

1. Make sure that D-50 is turned off.
2. Insert the Hcard-750 in the D50's memory slot and make sure it is fixed properly.
3. Turn on D-50.

After startup, The memory card display must show a number between 00-64. If the display blinks or shows nothing, there is something wrong and you must perform the above steps again.

### Touch Functions:

[+] one touch: increment bank number +1.

[-] one touch: decrement bank number -1.

[+] hold 1sec: increment bank number +10.

[-] hold 1sec: decrement bank number -10.

**How to enable "Memory protect" ?** Press and hold[+] button on the cartridge, 1 sec after D-50 startup. The card display will blink which shows it accepts your command. In this case all 64 banks are write protected. Do the same method with [-] for disabling Memory Protect.

Soundbank	Description	Soundbank	Description
<b>00-Factory</b>	D-50 Factory SoundBank	<b>06-Bass 1</b>	64 Bass sounds
<b>01-Piano/Organ</b>	Piano, Organ and Marimba	<b>07-Bass 2</b>	64 Bass sounds
<b>02-String/Orch</b>	String and Orchestral Sounds	<b>08-Analog Set 1</b>	64 analog sounds
<b>03-Woodwind</b>	Woodwind and Sax	<b>09 Analog Set 2</b>	64 analog sounds
<b>04-Bell</b>	64 Bell Sounds	<b>10-Pad</b>	64 electronic pad sounds
<b>05-Brass</b>	64 Brass Sounds	<b>11-Soundscape</b>	FX and Soundscape

**Micro USB connection:** You should only use this port for connecting to H-Display module. Please do not connect the H-card to your PC, charger or other USB host devices. H-Card is not a mass storage device.