

Hcard-750 Quick-Start

Multibank Memory Card For Roland D-50 (rev.2)

How to install :

1. Make sure that D-50 is turned off.
2. Insert the Hcard-750 in the D50's memory slot and make sure it is fixed properly.
3. Turn on D-50.

After startup, The memory card display must show a number between 00-64. If the display blinks or shows nothing, there is something wrong and you must perform the above steps again.

Touch Functions:

[+] one touch: increment bank number +1.

[-] one touch: decrement bank number -1.

[+] hold 1sec: increment bank number +10.

[-] hold 1sec: decrement bank number -10.

How to enable "Memory protect" ? Press and hold the [+] button on the cartridge, 1 sec after D-50 startup. The card display will blink which shows it accepts your command. In this case, all 64 banks are write protected. Do the same method with [-] for disabling Memory Protect. (white LED=On indicates "memory protect"=Enable, White LED=off indicates "memory protect"=Disable)

Soundbank	Description	Soundbank	Description
00-Factory	D-50 Factory SoundBank	06-Bass 1	64 Bass sounds
01-Piano/Organ	Piano, Organ and Marimba	07-Bass 2	64 Bass sounds
02-String/Orch	String and Orchestral Sounds	08-Analog Set 1	64 analog sounds
03-Woodwind	Woodwind and Sax	09 Analog Set 2	64 analog sounds
04-Bell	64 Bell Sounds	10-Pad	64 electronic pad sounds
05-Brass	64 Brass Sounds	11-Soundscape	FX and Soundscape

Micro USB connection: You should only use this port for connecting to H-Display module. Please do not connect the H-card to your PC, charger, or other USB host devices. H-Card is not a mass storage device.